


PRS-77 Inductive panel configuration

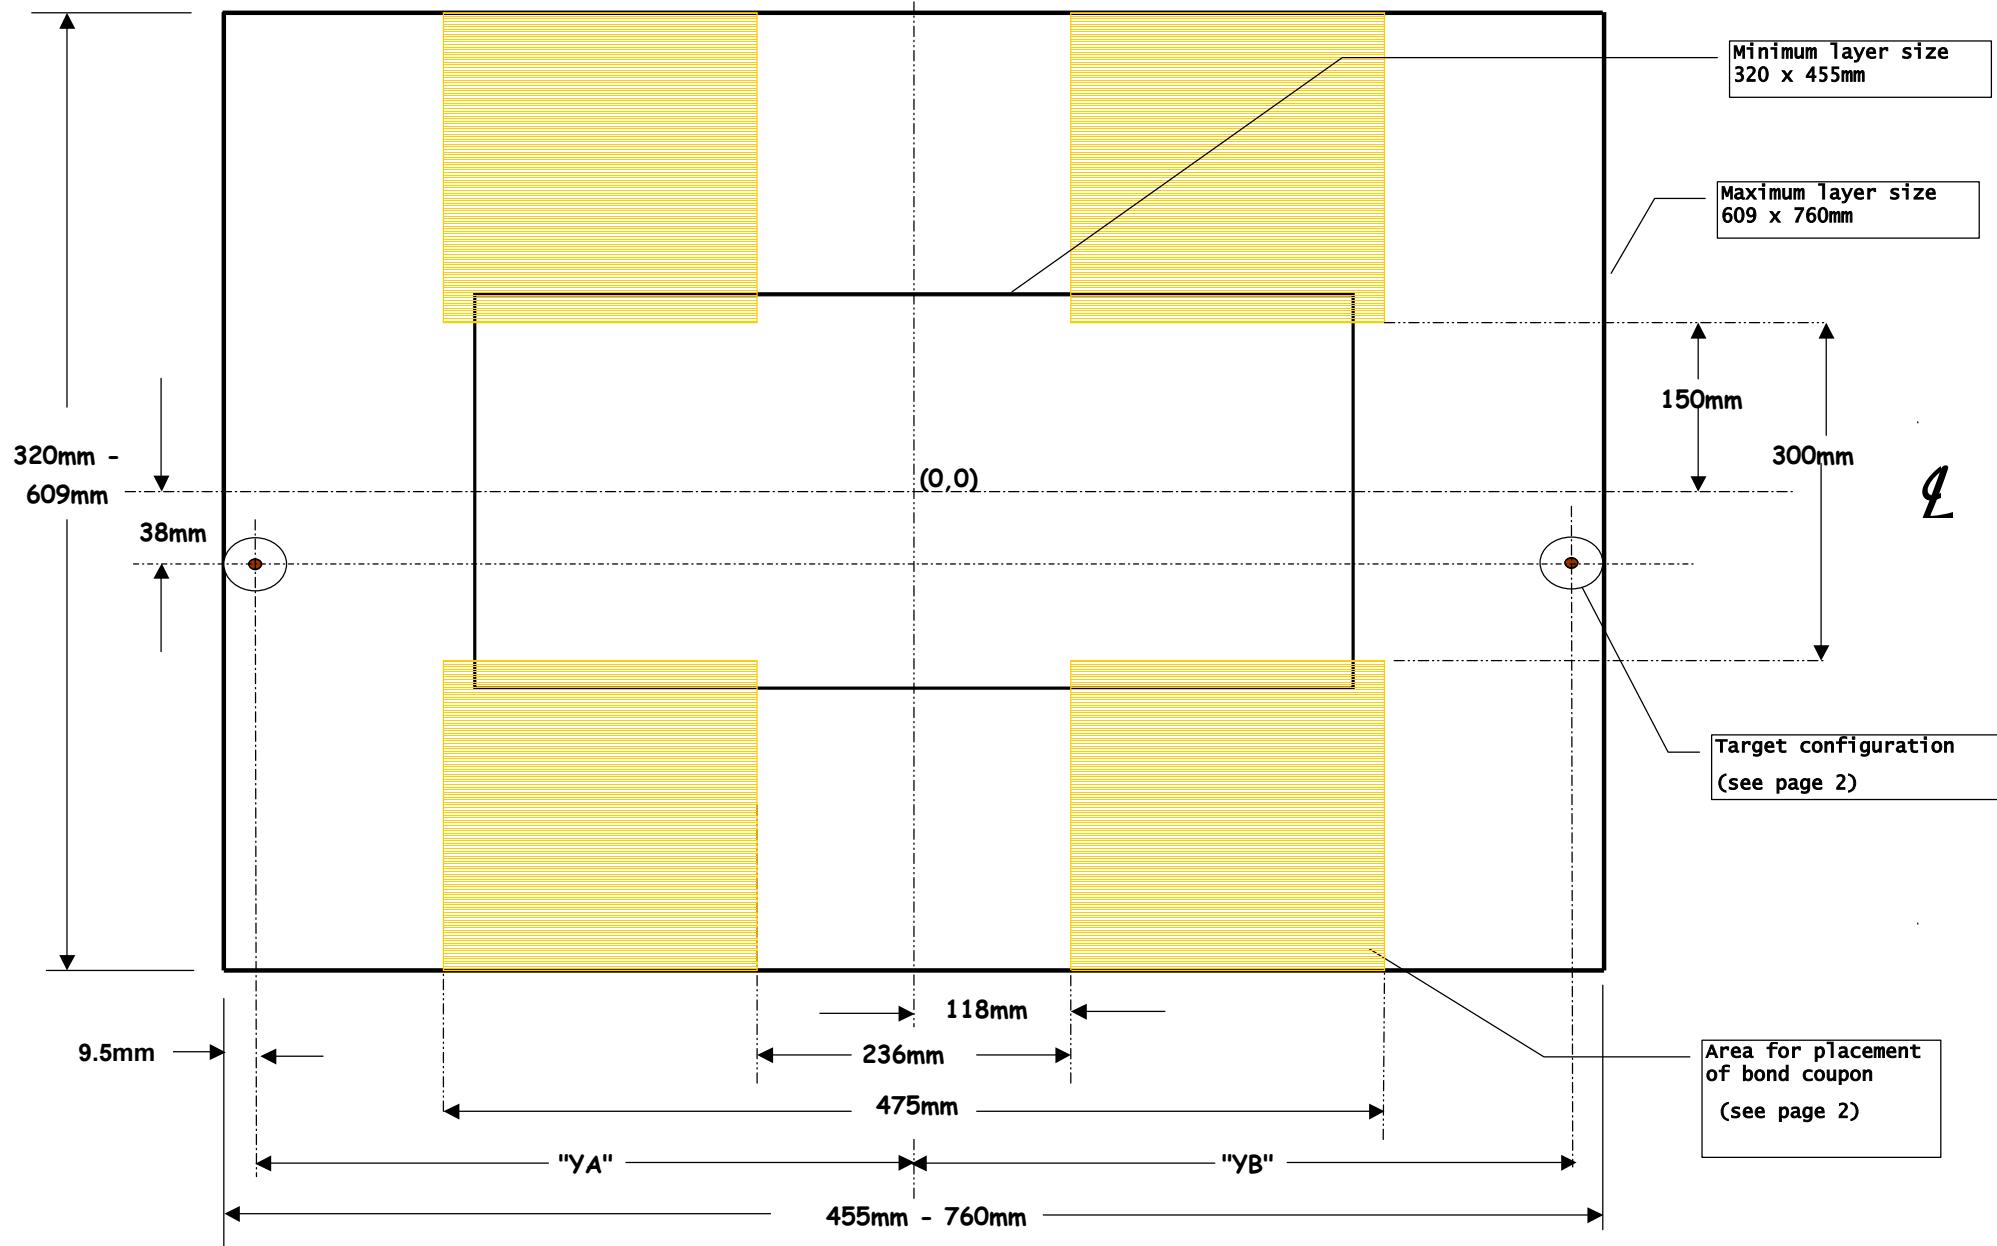


Target configuration and locations

| Panel size Inches | Target Locations YA / YB |
|----------------------|--------------------------------|
| 18 | 8.625 |
| 19 | 9.125 |
| 20 | 9.625 |
| 21 | 10.125 |
| 22 | 10.625 |
| 23 | 11.125 |
| 24 | 11.625 |
| 25 | 12.125 |
| 26 | 12.625 |
| 27 | 13.125 |
| 28 | 13.625 |
| 29 | 14.125 |
| 30 | 14.625 |

| Panel size mm | Target Locations YA / YB |
|------------------|--------------------------------|
| 457 | 219 |
| 483 | 232 |
| 508 | 244 |
| 533 | 257 |
| 559 | 270 |
| 584 | 283 |
| 610 | 295 |
| 635 | 308 |
| 660 | 321 |
| 686 | 333 |
| 711 | 346 |
| 737 | 359 |
| 762 | 371 |

Target configuration

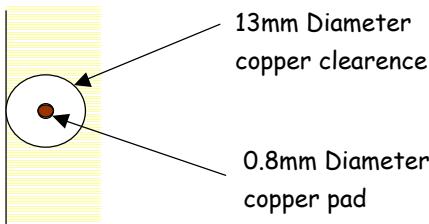


Target locations, 0.8mm (0.030") diameter pad in 13mm (0.50") diameter clearance of copper on top side of innerlayers

Bond site configuration

Bond site coupon can be placed in any location in the shaded area for the panel size selected.

Bond site coupon

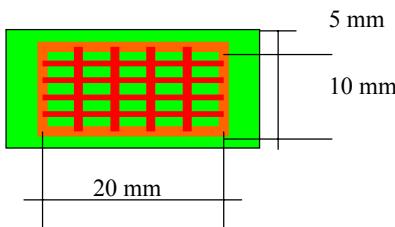

Copper line 1 mm



Etched area 2 mm

